


SPECIFICATION

ABSOLUTE STYLING

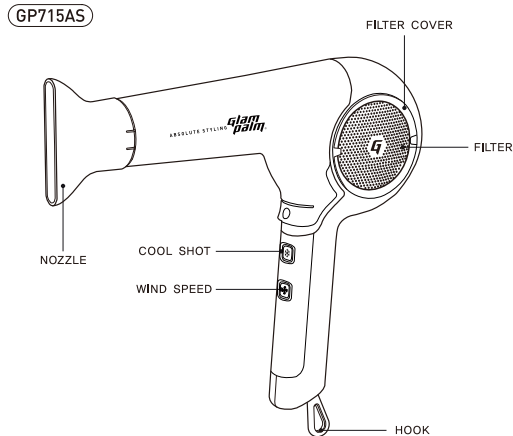

ITEM	HAIR DRYER
MODEL NO.	GP715AS
SUPPLY VOLTAGE	AC230-240V
POWER CONSUMPTION	1,600W
MOTOR	G7 BRUSHLESS DC MOTOR
WEIGHT	450g (without cord)
CORD LENGTH	3,2m
MANUFACTURE DATE	Indicated on the product
MANUFACTURER	Unil Electronics Corp., Korea

SAFETY INSTRUCTIONS

ABSOLUTE STYLING

IMPORTANT SAFETY INSTRUCTIONS

 
READ ALL INSTRUCTIONS BEFORE USING

DANGER: When using any electrical appliance, basic safety precautions should always be followed. Be especially cautious if children are present. As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- ⊗ **HOT!** Do not touch the nozzle. Keep eyes and skin away from the heated surfaces.
- ⊗ Always unplug the appliance immediately after use.
- ⊗ The dryer is designed to operate only in standard electrical outlets - 230-240 V, 50/60Hz.
- ⊗ Do not use this appliance with a voltage converter.
- ⊗ Do not clean this appliance with thinner, gasoline, or alcohol.
- ⊗ Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has come in contact with water.
- ⊗ Do not reach for this appliance if it has fallen into water, unplug it immediately.
- ⊗ Keep the cord away from heated surfaces. Do not pull, twist or wrap the cord around the appliance.
- ⊗ Do not use in outdoors or operate where aerosol products are being used, or where oxygen is being administered.
- ⊗ Do not insert anything onto the openings or into the nozzle.
- ⊗ Do not place this appliance directly on any unsafe surface while it is hot or plugged in. It is recommended to use a stand or heat proof mat to avoid burning any surfaces.
- ⊗ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.



** If the cord is damaged, it must be replaced by the manufacturer, its agent or similarly qualified person in order to avoid a hazard **

SAVE THESE INSTRUCTION

ABSOLUTE STYLING

Glam palm

UNIL Electronics Corp.

Made in Korea

User's Guide

Glampalm Professional Dryer

OPERATING INSTRUCTIONS

ABSOLUTE STYLING



1. Check Voltage Before Use

Please check if the voltage is 230-240V.



2. Plug in the Cord

Plug in the cord to a wall outlet.



3. Power ON/OFF

Press and hold either the COOL SHOT or WIND SPEED buttons for 1 sec., to power on or power off the dryer.



4. Rapid Hair Drying

First use a towel to dry dripping wet hair. Then use the G7 Airtouch, keeping a safe distance between the nozzle and scalp.



5. COOL SHOT Function

A quick press of the COOL SHOT button activates/deactivates the cooling function. When in the cooling mode, the button will glow blue. Cool air is ideal for damaged or high-static hair.



6. After Use

After drying hair, turn off the power and unplug the cord. Store in a place children cannot reach.

LED INDICATORS

ABSOLUTE STYLING

1. LED Color Indicator Guide

Pressing the COOL SHOT or the WIND SPEED button for approximately 1 second turns the power ON or OFF.

COOL SHOT BUTTON : RED → Hot air
BLUE → Cool air

WIND SPEED : WHITE → Low Speed
GREEN → Medium Speed
BLUE → Maximum Speed

2. Default Setting

When the dryer is turned on, it defaults to hot air and medium power. The cycling order of the WIND SPEED goes from **Medium – Low – Maximum**

FEATURES

ABSOLUTE STYLING



1. G7 Brushless DC Motor

The G7 motor is Glampalm's advanced 7th generation motor, based on brushless switching technology. Compared to traditional AC and DC motors, the G7 is lighter, stronger, and lasts longer!



2. 3.2m Long Cable

3.2m cable provides flexibility and freedom during styling, whether at home or the salon.



3. Locking, Rotatable Nozzle

The nozzle direction can be rotated and locked in place in 45° increments for maximum flexibility during styling.



4. Flush, Digital Buttons

Buttons are flush with the handle surface and do not stick out – no more accidentally turning off the dryer or changing the speed during styling.



5. Healing Stone™ Coated Grating

Grating coated with Healing Stone™ Ceramic infuses a final burst of far infrared heat into the air for softer, smoother hair drying.



6. SPEED

The G7 brushless motor provides powerful heat and wind speed, minimizing drying time

SAFETY INSTRUCTIONS

ABSOLUTE STYLING



1. Do not store the product near fire or in areas with high temperature and humidity.



2. Keep out of reach of children.



3. Clean the grip with a dry cloth or a neutral detergent, and never put in contact with water.



4. Do not pull out the plug with excessive pressure, or bend and the twist the cord to avoid wiring defects.



5. Do not drop the product or subject it to excessive force, prevent defects or the chance of electrical shock.



6. Do not use near any chemicals or flammable materials to avoid serious accidents.



7. Do not use while bathing, or place this appliance where it can fall or be pulled into a tub or sink. Never use with wet hands.



8. Dispose of the product in a designated disposal center. If the product stops functioning, do not attempt to disassemble it - contact your nearest dealer or distributor